



How to Connect Wirelessly (Wi-Fi) to the Qwest® Advanced Networking Modem: 2Wire® 2701 HG

Internet Service Provider (ISP):

All




Use this document if:

- You need to configure your Qwest Advanced Networking Modem: 2Wire 2701 HG.

This document assumes:

- Your computer is directly connected to the modem using an Ethernet cable.
- The Qwest Advanced Networking Modem: 2Wire 2701HG modem is powered on.

1. The modem is broadcasting wirelessly by default. However, the wireless light will not turn on until the wireless is in use and connected. The 2Wire wireless network by default is named "2WIRExxx" where xxx is the last three numbers of the serial number and can be found on the bottom of the modem. There is also a 10-digit security key printed on this sticker which is needed when trying to connect to the 2Wire modem wirelessly.

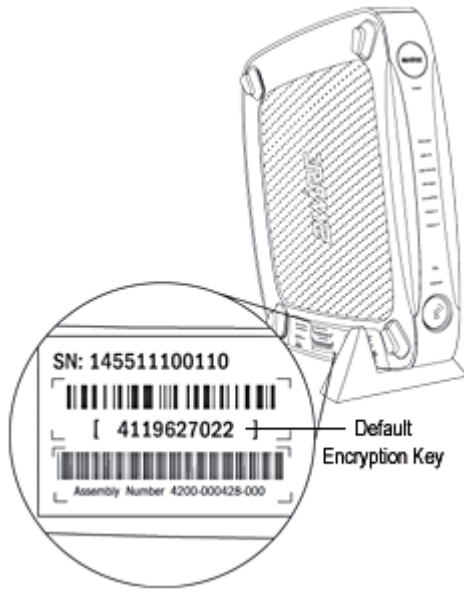

2. Select the appropriate operating system then choose the instructions for 'wireless setup'.
 - [Windows Vista](#)
 - [Windows XP](#)
 - [Windows 2000](#)
 - [Mac OS X](#)